



M O L E C U L E 1 6

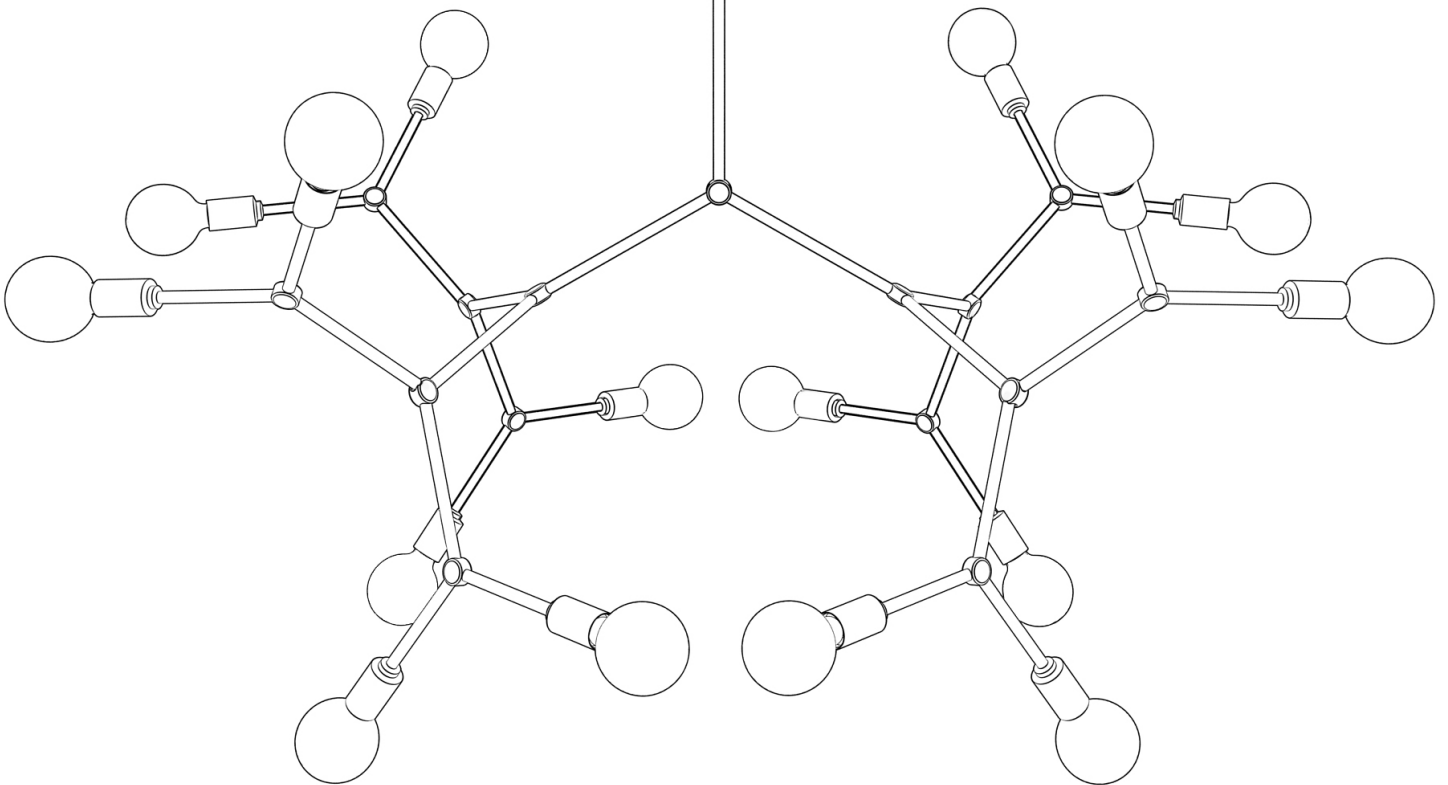

ASSEMBLY INSTRUCTIONS

WWW.HOIPLOY.COM

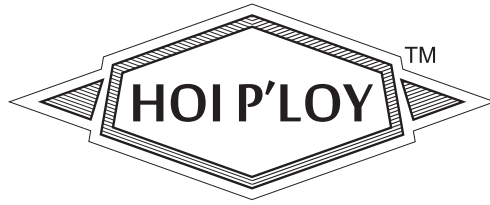


ASSEMBLY INSTRUCTIONS

WWW.HOIPLOY.COM

MOLECULE 16


IMPORTANT: Installation should only be performed by qualified electrician.
(Two-man job)

PARTS LIST

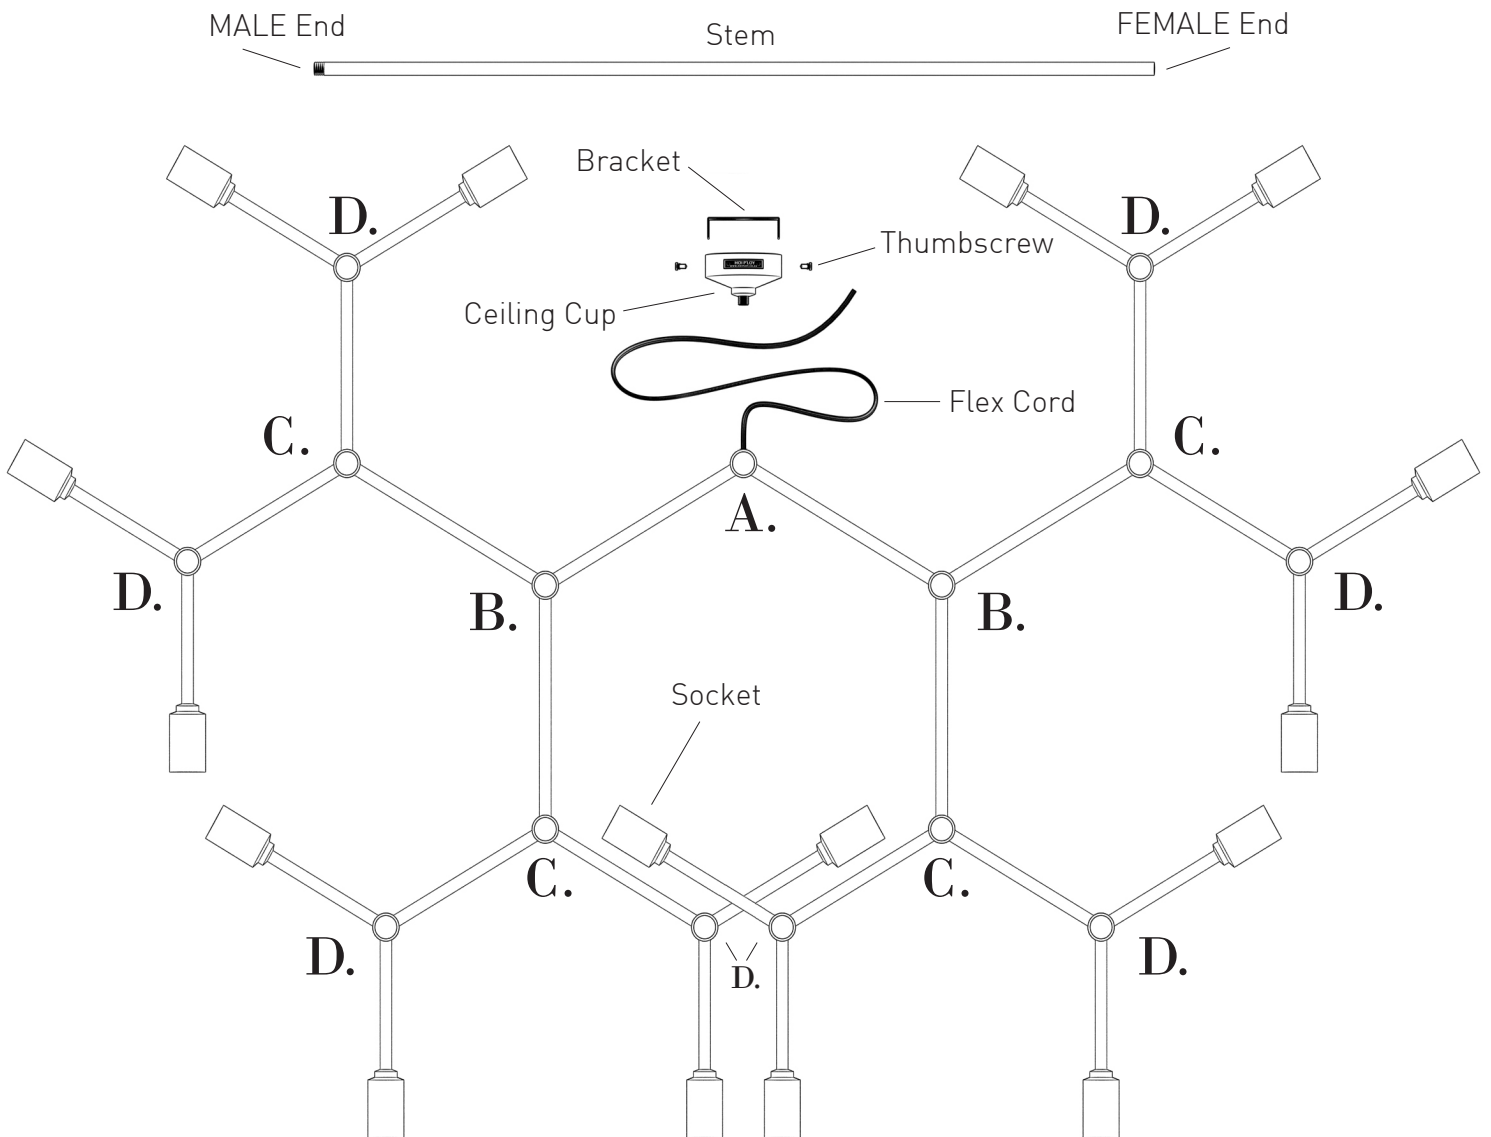

A. Joint A (1st Joint), **B.** Joint B (2nd Joint), **C.** Joint C (3rd Joint), **D.** Joint d (4th Joint)


Have questions about assembly instructions? Get in touch using our contact details below

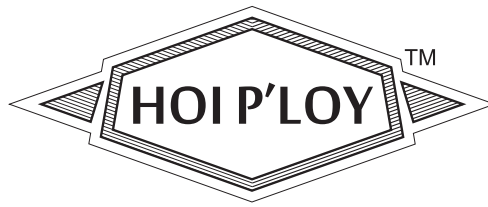

MOLECULE 16


STEP 1

Begin by threading the flex cord through the stem, starting at the MALE end, and then screw the stem tightly into joint A. Take care not to twist the flex cord as the stem is screwed in.

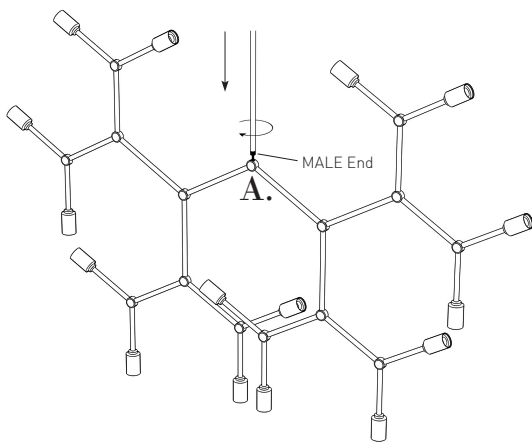



STEP 2

Thread the remaining flex cord through the ceiling cup, and screw it tightly into the FEMALE end of the stem. Insert the flex cord ends into the cable connector block along side the earth and fasten them in place using a screwdriver.

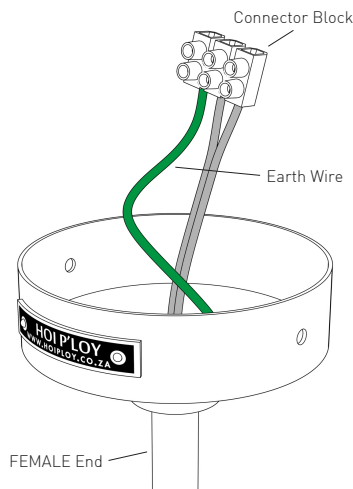

STEP 3

Fasten the bracket to the ceiling ensuring that it is secure enough to hold the full weight of the light. Connect the wires up to their corresponding counterparts and secure the ceiling cup in place using the thumbscrews.

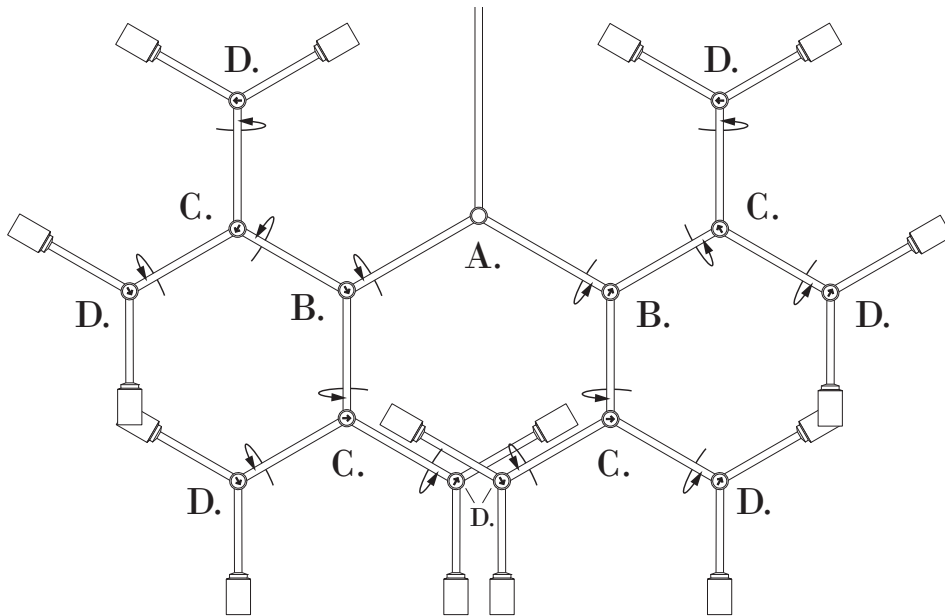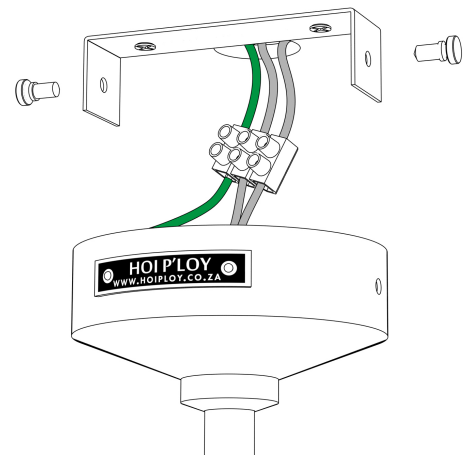

Rotate **joints B. 90° clockwise** (in the direction of the arrow) or a **maximum** of 180° (half a turn).

Next rotate **joints C. 90° clockwise** (in the direction of the arrow) or a **maximum** of 180° (half a turn).

Lastly rotate **joints D. 90° clockwise** (in the direction of the arrow) or a **maximum** of 180° (half a turn).

90° to match the symmetrical diagram on cover page or random degrees for desired "asymmetrical" configuration.

WARNING! DO NOT FORCE OR ROTATE MORE THAN 180°

Finish up by removing the arrow sticker guides. **IMPORTANT: DO NOT CLEAN WITH SOLVENT**

Have questions about assembly instructions? Get in touch using our contact details below